



Index

A

- adding a
 - microprocessor, 8-10
- assignments
 - IRQ, 4-3
- assistance
 - technical, 10-1
 - telephone numbers, 10-7
 - warranty repair or credit, 10-4
- AutoTech service, 10-3

B

- back panel, 2-3
- basic checks, 2-1
- battery
 - replacing, 8-16
- beep codes, 3-10
- boot routine indications, 2-5

C

- calling Dell, 10-7
- cautions, v, xv
- CD-ROM cables, 9-8

- checking
 - connections, 2-2
 - switches, 2-2
- computer
 - inside view, 7-6
- computer cover
 - removing, 7-2, 7-3
 - replacing, 7-3, 7-4
- connecting
 - CD-ROM cables, 9-8

D

- defaults
 - IRQ, 4-3
- Dell Diagnostics
 - Device Groups menu, 5-3
 - features, 5-1
 - using, 5-3
- device options, 5-4
- diagnosing problems, 10-1
- diagnostic messages, 3-12
- diagnostics
 - device group options, 5-3
 - Device Groups Menu, 5-3
 - devices options, 5-4
 - error messages, 5-5
 - parameter options, 5-4
 - starting, 5-2
 - using, 5-1, 5-3

- Diagnostics Checklist, 10-6
- diagnostics. *See* Dell Diagnostics
- DIMMs
 - configurations, 8-7
- disabling password, A-4
- drive bay
 - inserting, 9-7
- drive bracket
 - attaching, 9-6
- drives
 - connecting, 9-2
 - locations, 9-2

E

- electrostatic discharge. *See* ESD
- errors, 4-2
- ESD, x
- expansion cards, 8-2
 - installing, 8-3, 8-5
 - removing, 8-6

F

- file backup, 2-1
- fixing problems, 10-1
- formatting
 - hard-disk drives, 9-17
- front bezel
 - removing, 7-8
 - replacing, 7-8
- front panel, 2-4
- front panel inserts
 - removing, 7-9
 - replacing, 7-9

G

- getting help, 10-1
- guidelines
 - memory modules, 8-7
 - SCSI configuration, 9-13

H

- heat sink
 - installing, 8-15
- help tools
 - AutoTech service, 10-3
 - Internet, 10-2
 - TechFax service, 10-3

I

- inserting
 - hard-disk drive, 9-13
- installing
 - drive, 9-4
 - expansion cards, 8-3, 8-5
 - hard-disk drive, 9-8, 9-10
 - heat sink, 8-15
 - memory modules, 8-9
 - microprocessor, 8-14
 - SCSI devices, 9-13
- Internet help tools, 10-2
- IRQ assignments, 4-3

J

- jumpers, A-1

M

- memory
 - adding, 8-6
- memory module
 - guidelines, 8-7
 - removing, 8-9
- memory modules
 - installing, 8-9
- messages
 - diagnostic, 3-12
 - diagnostic error, 5-5
 - system, 3-2
 - warning, 3-11
- microprocessor
 - removing, 8-13

N

- notational conventions, v, xiv, xv
- notes, v, xv

P

- parameter options, 5-4
- partitioning
 - hard-disk drives, 9-17
- password
 - disabling, A-4
- power supply
 - rotating, 7-7
- problems
 - help tools, 10-1
 - with your order, 10-4
- product information, 10-4
- program conflicts, 4-2

R

- removing
 - computer cover, 7-2, 7-3
 - drive, 9-5
 - expansion cards, 8-6
 - filler bracket, 8-3
 - front bezel, 7-8
 - front panel inserts, 7-9
 - memory module, 8-9
 - microprocessor, 8-13
- replacing
 - battery, 8-16
 - computer cover, 7-3, 7-4
 - front bezel, 7-8
 - front panel inserts, 7-9
 - microprocessor, 8-10
- returns, 10-4
- rotating
 - power supply, 7-7

S

- safety instructions
 - for preventing ESD, x
 - health considerations, xi
- securing clip, 8-12
- service, 10-1
- software
 - configuring, 4-1
 - installing, 4-1
 - using, 4-1
- software solutions, 4-1
- starting diagnostics, 5-2
- support
 - technical, 10-1
- switches, A-2
- system beep codes, 3-10

- system board, 8-2
- system board jumpers, A-2
- system features
 - back panel, 2-3
 - front panel, 2-4
- system messages, 3-2
- System Setup program, 2-7

T

- TechFax service, 10-3
- technical assistance
 - obtaining, 10-1
 - warranty repair or credit, 10-4
- troubleshooting
 - basic I/O, 6-3
 - battery, 7-12
 - cooling fan, 7-14
 - damaged computer, 7-11
 - Diagnostics Checklist, 10-6
 - diskette drive, 7-21
 - expansion cards, 7-14
 - hard-disk drives, 7-26
 - integrated NIC, 6-7
 - Internet tools, 10-2
 - keyboard, 6-2
 - monitor, 6-1

- troubleshooting (*continued*)
 - power cable connections, 7-13
 - power supply, 7-13
 - printer, 6-4
 - serial I/O device, 6-5
 - system board, 7-19
 - system memory, 7-16
 - tape drive, 7-23
 - USB devices, 6-6
 - video, 6-1
 - video subsystem, 7-18
 - wet computer, 7-11
- typographical conventions, xv

U

- unpacking
 - hardware option, 7-1
- upgrades
 - microprocessor, 8-10

W

- warning messages, 3-11
- warnings, v, xv
- warranty repair or credit, 10-4
- World Wide Web help tools, 10-2